



Wall Adhesive Installation

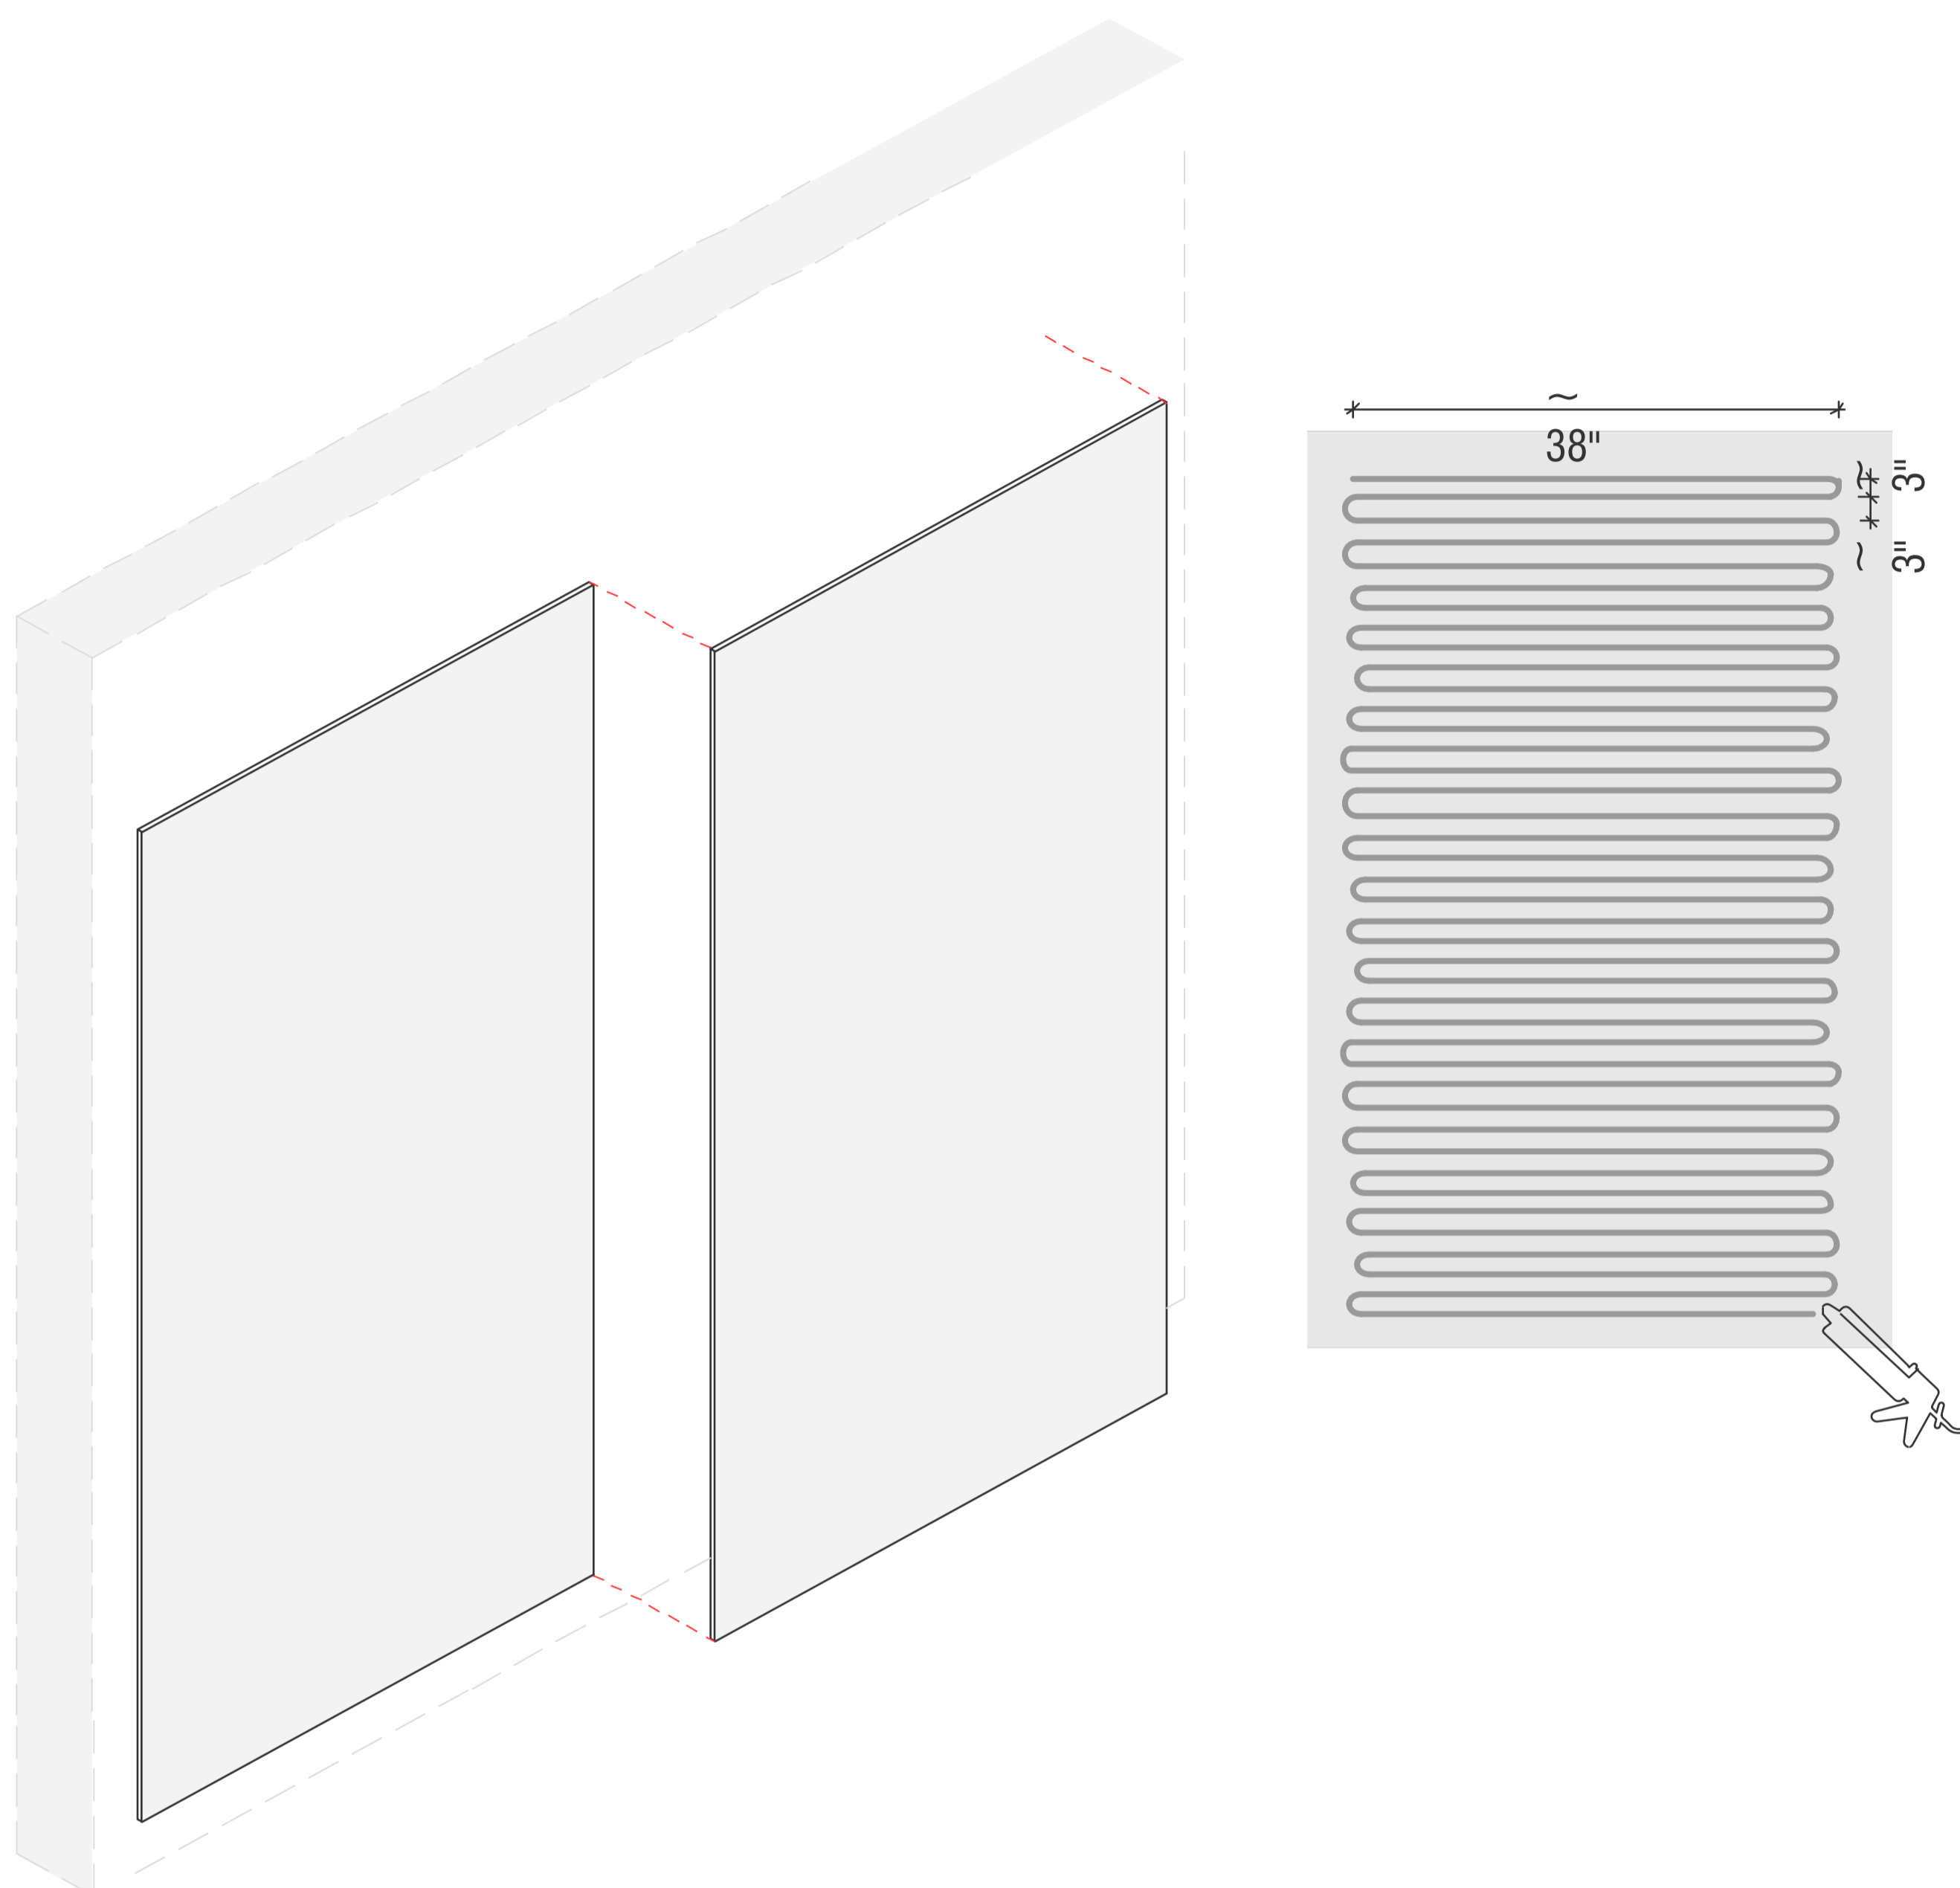

DIRECT MOUNT

- Use standard construction adhesives i.e., Liquid Nails and 100% silicon for doors and windows installation
- Clean and prepare surface per adhesive guidelines.
- Spread adhesive evenly on panel back, leaving 2" space at edges
- Adhere to wall surface, providing bracing to hold material against surface per adhesive open time/instructions

Off-Grid Adhesive Installation

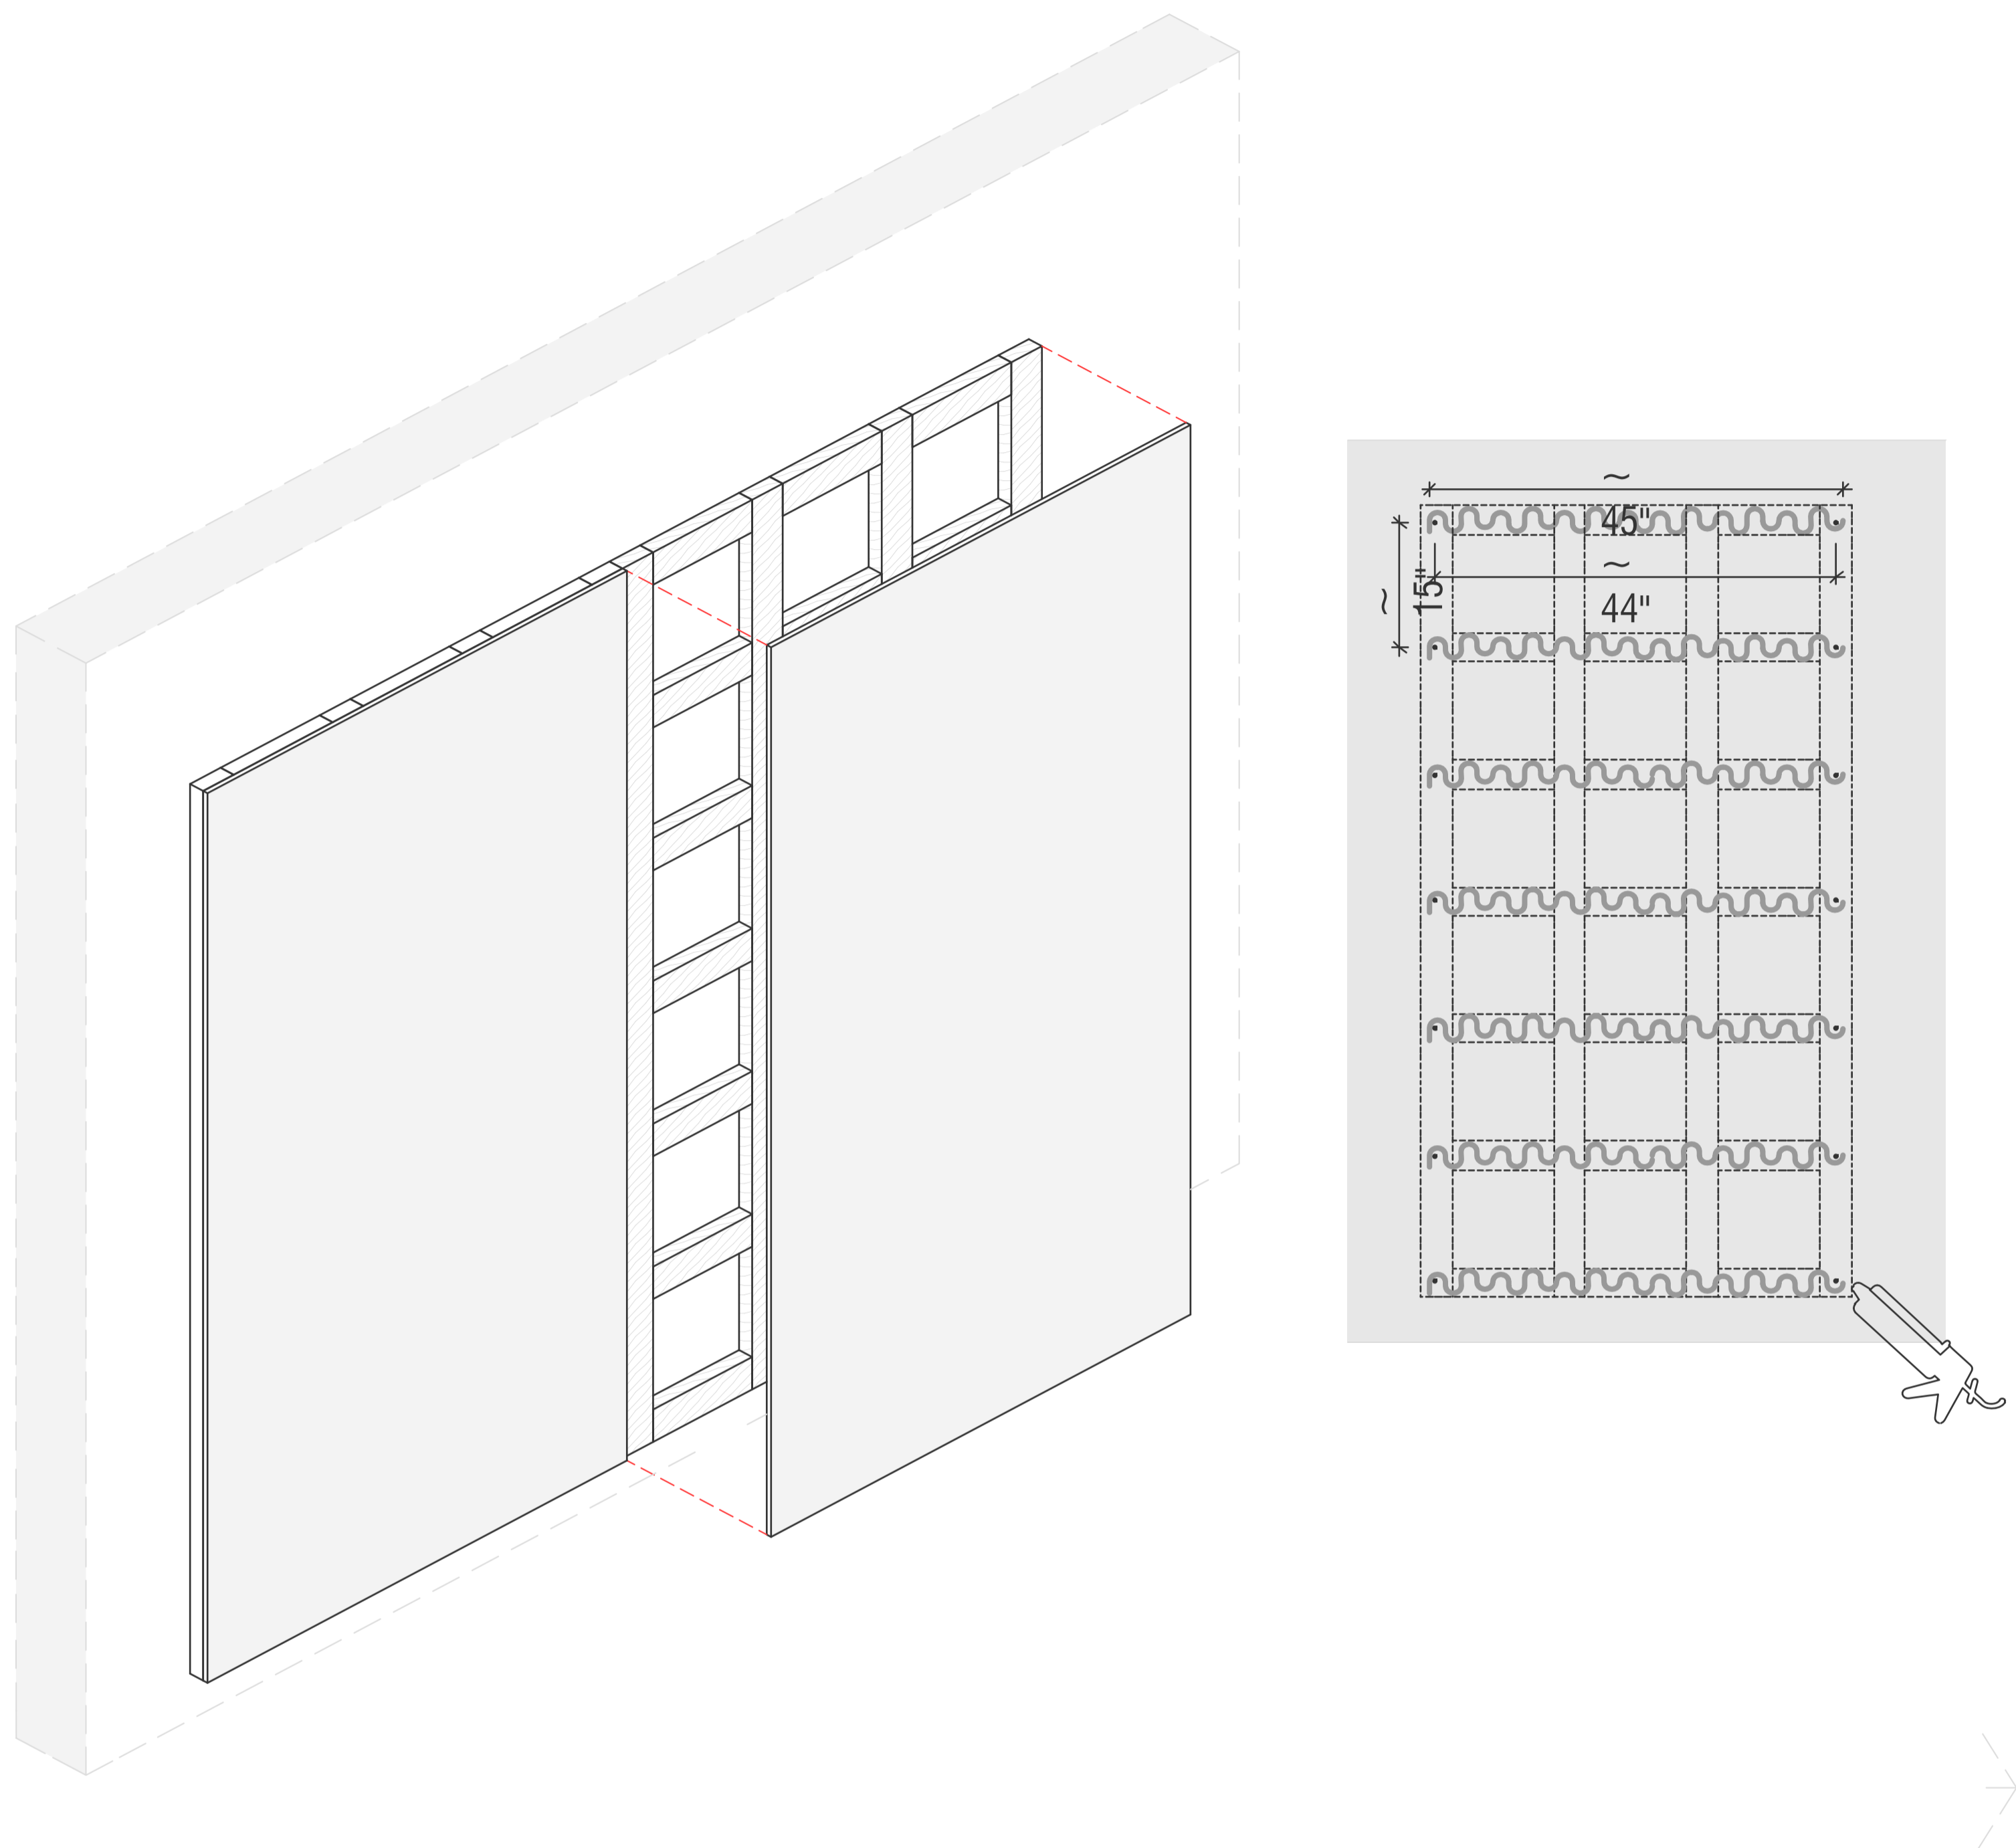

FURRING STRIPS FOR AIR GAPS

- Furring strips may be used to provide air space behind the panel
- Furring strips are made of wood
- Wood strips are fixed to the wall with bolts
- Recommended width 3-1/2" and thickness 1-1/2"
- Furring strips should be placed every 6"-18" along the panel depending on expected potential impact.
- Spread adhesive on furring strip surface and place panel to furring strips, bracing per adhesive instructions