


PANEL INSTALLATION

Adhesive Installation

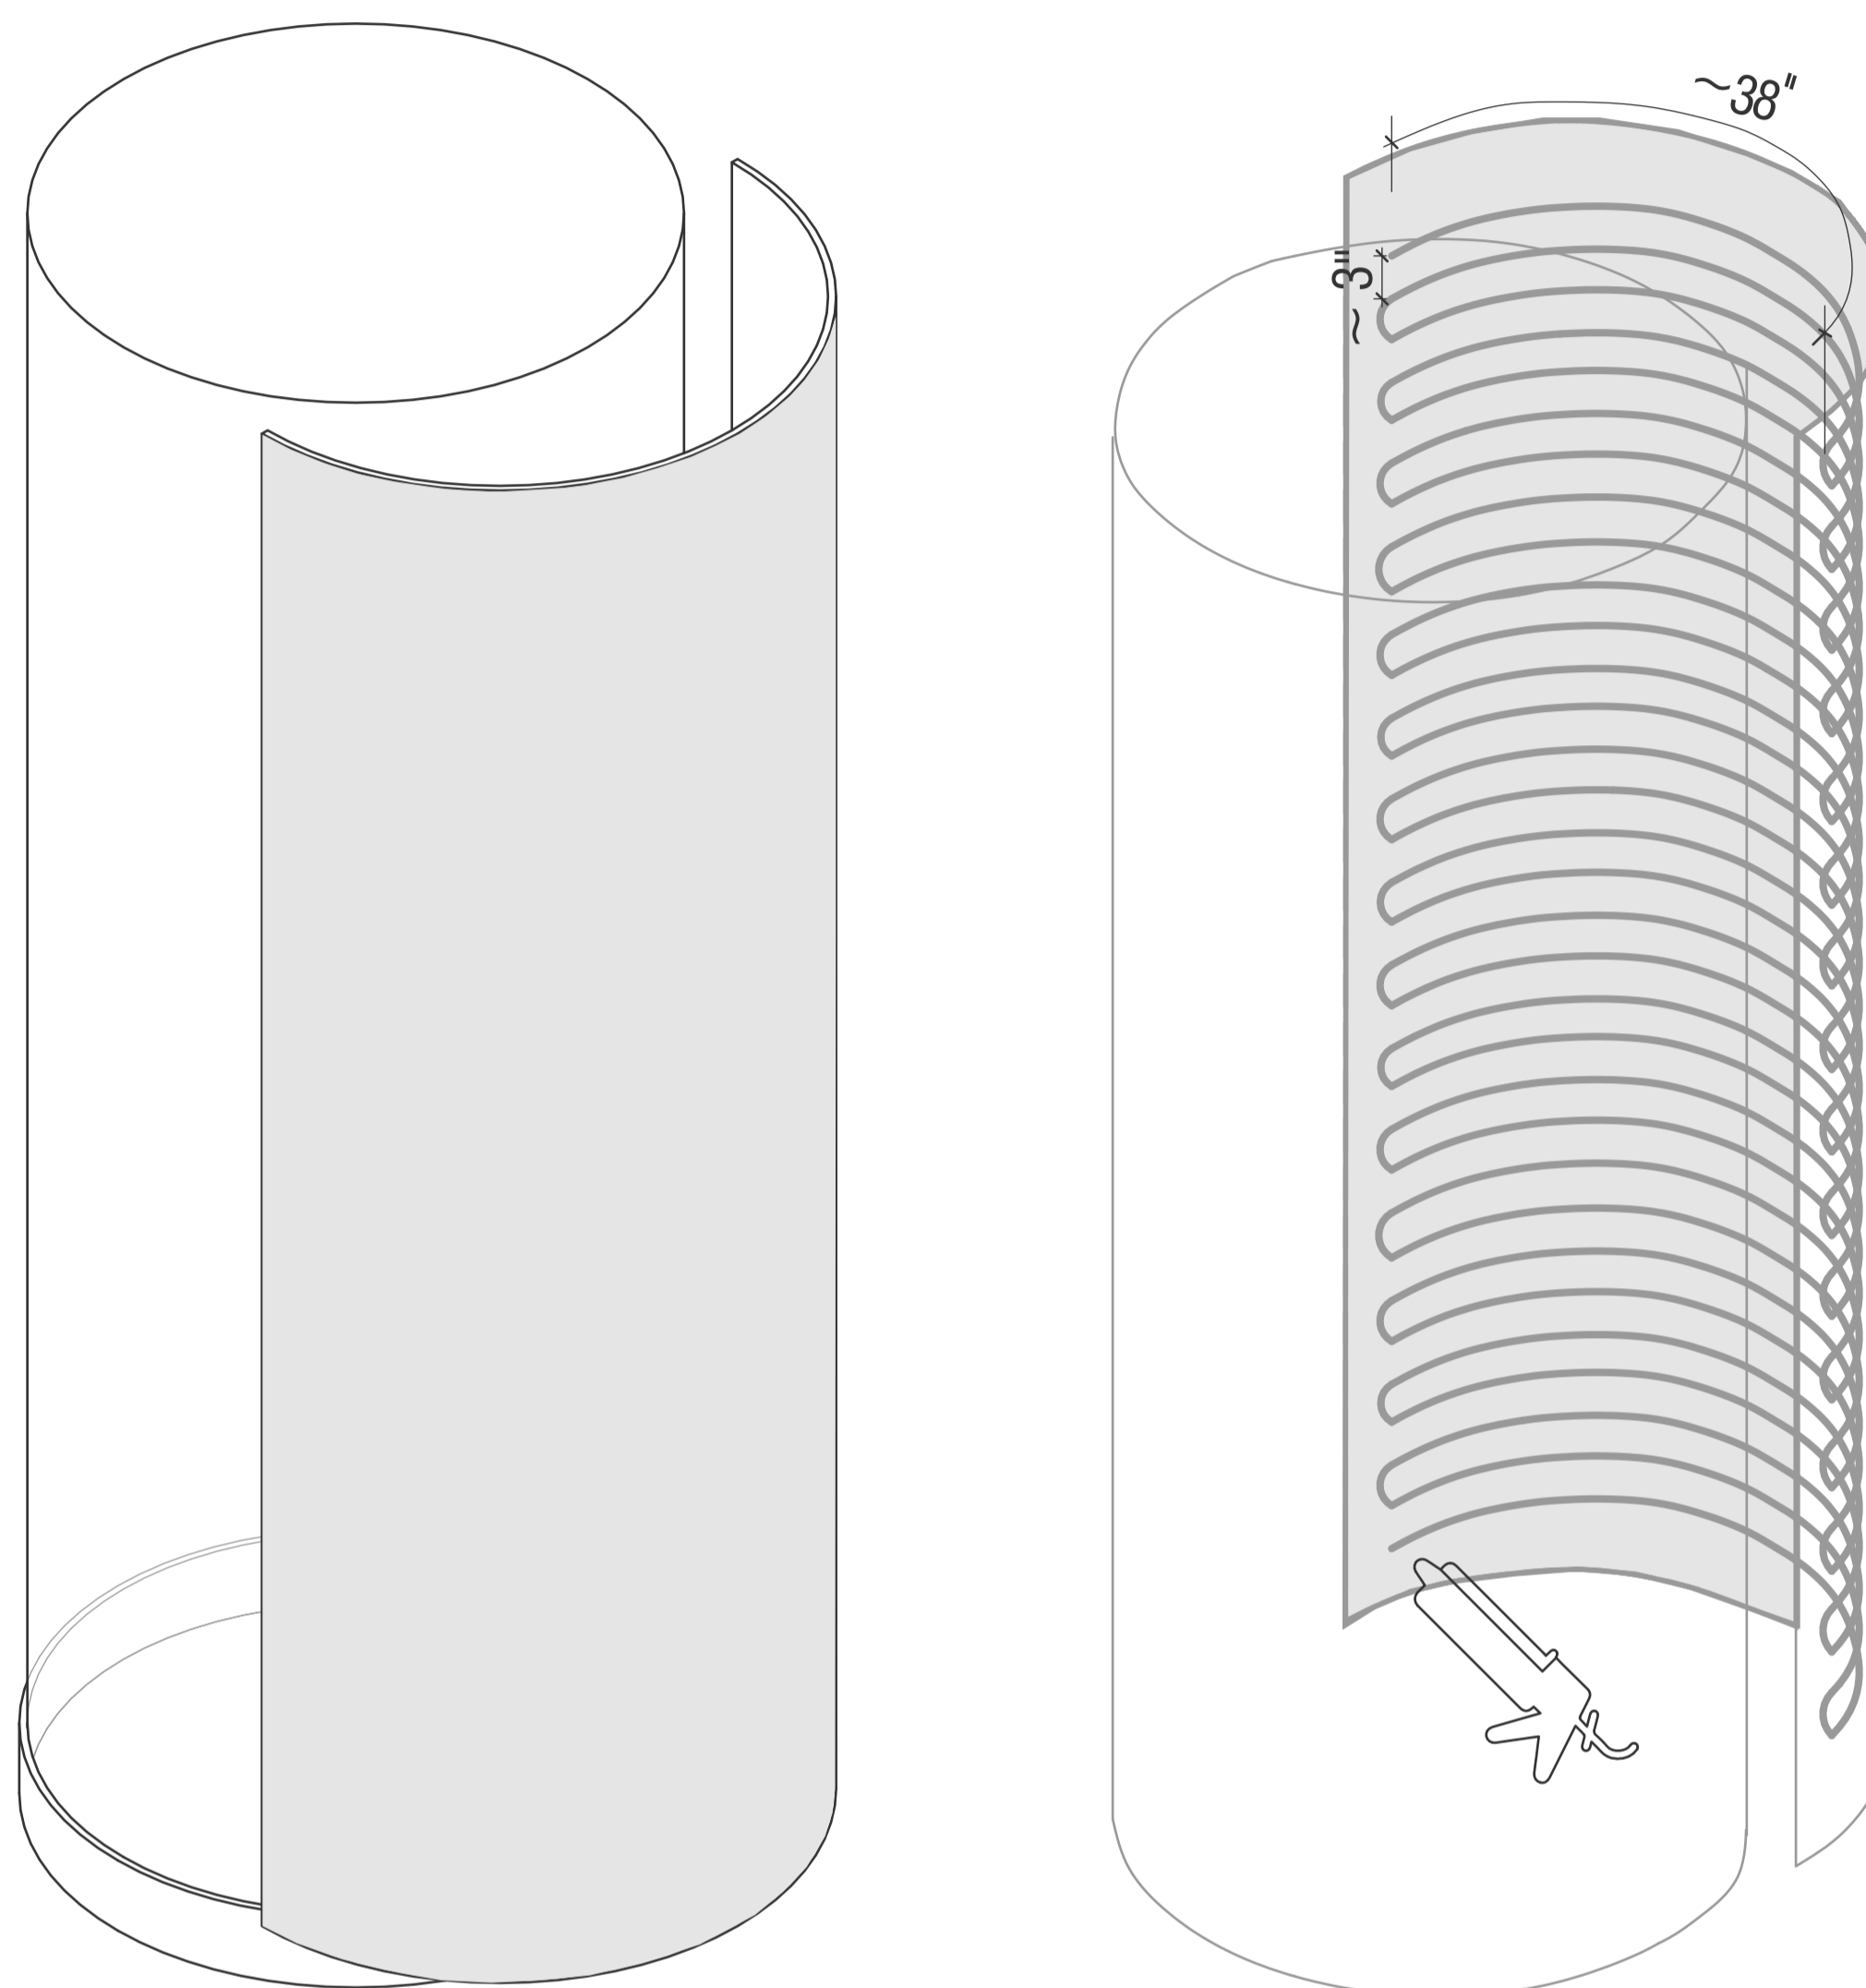

DIRECT MOUNT

- Use standard construction adhesives i.e., Liquid Nails and 100% silicon for doors and windows installation
- Clean and prepare surface per adhesive guidelines.
- Spread adhesive evenly on panel back, leaving 2" space at edges
- Adhere to wall surface, providing bracing to hold material against surface per adhesive open time/instructions